

Touchscreen Jukebox Instructions (Kiosk & Wall Mount)

Music Format

Your music needs to be in MP3 format. If you want an album cover make sure the image you want to use is in a JPEG format and is in your album folder.

If you don't have an album cover the jukebox will create a simple one for you.

Before loading music onto your jukebox you need to copy your albums from your PC onto the usb drive provided.

Uploading Music

With the jukebox running press `F11` on the keyboard, then select `Exit Kiosk Mode` from the drop down menu box using the touchscreen and then `Ok`.

Drag the jukebox window to one side by touching and holding the top bar of the jukebox window.

Insert the USB drive into the USB extension cable inside the jukebox. When the `Removable Disk` window opens (if this doesn't happen then read below for further instructions) select `Open Folder to view Files` and then `OK`

**** If the `Removable Disk` doesn't open then double tap `Drives` on your desktop screen and in the `Drives` window you will see your `Removable Disk` folder. Double tap the folder to open. Make sure you then close the `Drives` window by touching the `X` in the top right corner of the window ****

In the `Removable Disk` folder find your Album and touch, hold and drag it onto the `Music` icon on the main desktop screen (you may need to move your `Removable Disk` window by touching, holding & dragging the top bar of the `Removable Disk` window to one side)

When the album has finished transferring you can repeat with the next album.

When finished touch the `X` in the top right corner of the `Removable Disk` window to close it.

To instruct your jukebox to find the new music press `F4` on the keyboard. When the `Settings` window opens on the screen select the `Music Library` tab using the touchscreen and then press `F5` on the keyboard.

Once your music has updated, still in the `Settings` window, select the `Kiosk Mode` tab on screen and then press `Enter` on the keyboard or `Start` button on screen.

Turning Off the Jukebox

The jukebox is basically a PC and as such needs shutting down correctly. Don't be tempted to just turn off the power.

To shutdown the jukebox press `F11` on the keyboard or touch opposite corners on the screen. Then select `Shutdown Computer` from the drop down menu box.

Some jukeboxes need to be switched off when the PC shutdowns or they will restart.